
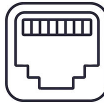




Configuration Notes (Sophos XG 106)

Thank you for purchasing the Sophos XG 106 network appliance! To make this appliance useful to people who do not have a Sophos license and don't want to get one, we have installed the OPNsense operating system and tested this appliance to ensure its working condition.

If you intend to reset OPNsense to its initial settings, we still recommend that you read the remainder of this note to familiarize yourself with how OPNsense interacts with this device's components.

This model has on-device labeling of physical ports. When configuring OPNsense, we made interface designations consistent with this labeling to reduce confusion:

	1	2	3	4
				
On-device markings	LAN	WAN	DMZ	
OPNsense designations:				
Functional (set by us)	LAN	WAN	OPT1	OPT2
Internal (set by OPNsense)	igb1	igb2	igb3	igb0

In short, the port labeled **LAN** is now officially a **LAN** port, and same goes for **WAN**.

We have configured the **WAN** port to act as DHCP client (i.e., to ask the upstream device for an IP address). The **LAN** port has been configured to provide DHCP service; its IP address is **192.168.1.1**. The remaining ports have been designated **OPT1** and **OPT2** and left unconfigured.

The management interface is accessible **on the LAN port only** at <https://192.168.1.1>; the login name is **root**, the password is **password** (we changed the default OPNsense password to get rid of the nagging reminders in the management interface). Take a moment to change the password to something more secure (navigate to **Lobby** >> **Password** in the Web-based interface and change the password there).

Happy networking!

The **ncbase** team